

SAE **J3016™** LEVELS OF DRIVING AUTOMATION™

Learn more here: sae.org/standards/content/j3016 202104

Copyright © 2021 SAE International. The summary table may be freely copied and distributed AS-IS provided that SAE International is acknowledged as the source of the content.

SAE **LEVEL O**™ SAE **LEVEL 1**™ SAE **LEVEL 2**™ SAE **LEVEL 3**™ SAE **LEVEL 4**™

You are not driving when these automated driving

features are engaged – even if you are seated in

"the driver's seat"

SAE **LEVEL 5**™

What does the human in the driver's seat have to do?

You <u>are</u> driving whenever these driver support features are engaged – even if your feet are off the pedals and you are not steering

You must constantly supervise these support features; you must steer, brake or accelerate as needed to maintain safety When the feature requests,

you must drive

These automated driving features will not require you to take over driving

Copyright © 2021 SAE International.

These are driver support features

What do these features do?

These features are limited to providing warnings and momentary assistance

These features provide steering OR brake/acceleration support to the driver

These features provide steering AND brake/ acceleration support to the driver

These are automated driving features

These features can drive the vehicle under limited conditions and will not operate unless all required conditions are met

This feature can drive the vehicle under all conditions

Example Features

- automatic emergency braking
- blind spot warning
- lane departure warning
- lane centering OR
- adaptive cruise control
- lane centeringAND
- adaptive cruise control at the same time
- traffic jam chauffeur
- local driverless taxi
- pedals/ steering wheel may or may not be installed
- same as level 4, but feature can drive everywhere in all conditions